


DDX, Change the size and position of engraving

Select “Nest”  then select “Configuration” 

Select “Part” and then “Label”

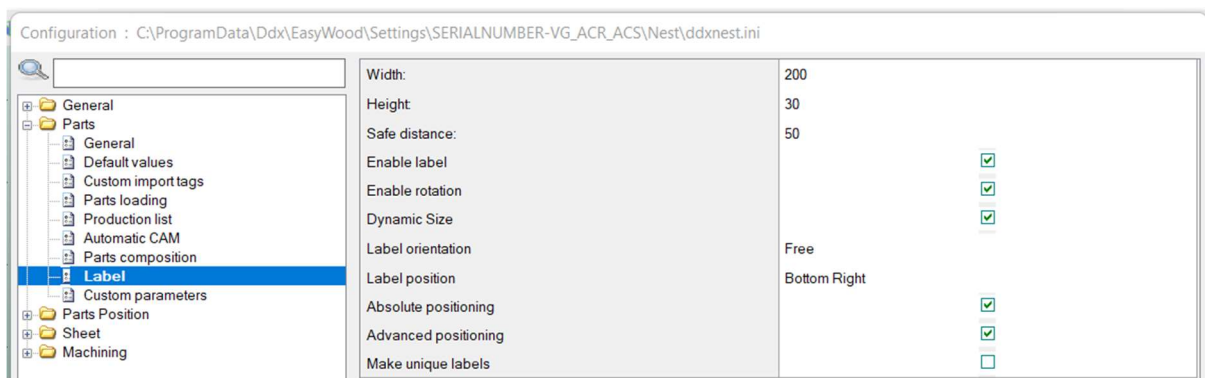

Ensure “Dynamic Size” is selected.

You can now edit the size of the text by editing Width and Height.

Select “Ok” to save any changes.